



# SETTING UP YOUR TV SIGN


## STEP 1 CONNECT THE TV SIGN STICK TO YOUR TV

1. Connect the short HDMI cord to both your TV Sign Stick and to your television's HDMI port (take note of the HDMI input you have used... ie HDMI 1, HDMI 2).
2. Connect the USB Power Cord to both your TV Sign Stick and your television's USB port.
3. Power on your television.
4. Set your Television's HDMI Input on to the HDMI input you have installed the TV Sign Stick.

### FAQ:

Q: What is the small USB stick installed at the base of the TV Sign Stick?

A: This connects with your wireless keyboard and mouse pad. If you have multiple TV Sign Sticks you will need to move this Wireless USB stick from device to device while repeating Step 2

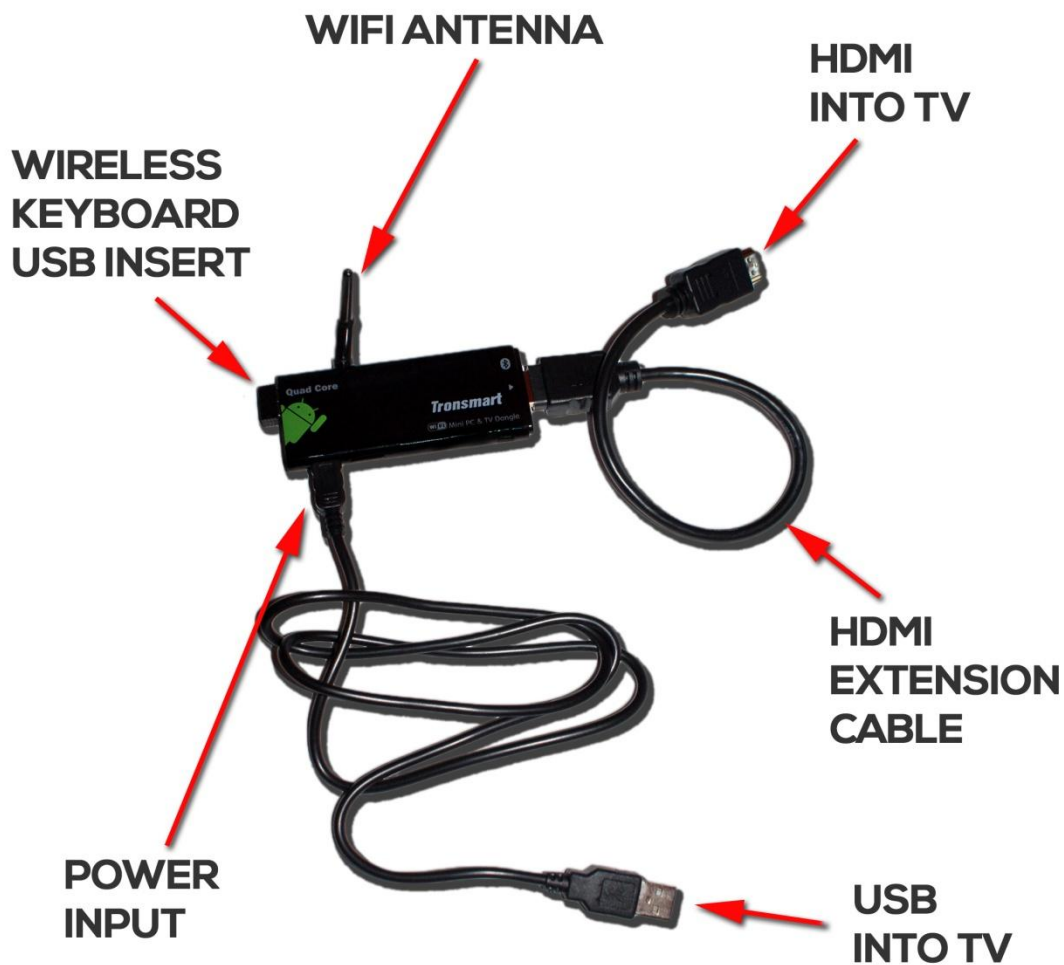


## STEP 2 CONFIGURE THE WIFI FOR YOUR TV SIGN STICK

1. Allow the TV Sign Stick to load... The TV Sign Player will start automatically as it is programmed to do this every time you turn your TV on. You will see a Welcome Slideshow.
2. On the keyboard, switch the POWER SWITCH to the on position.
3. Exit the TV Sign Player by pressing the CONFIGURE BUTTON on your keyboard
4. Using the keyboard LEFT CLICK / ACTION select the WiFi Manager icon (or tap)
5. Select your wireless signal
6. Enter password if necessary and click Connect
7. Press the CONFIGURE BUTTON on the keyboard to return to the home page
8. LEFT CLICK / ACTION on the TV Sign Player icon to continue playing the slideshow. The slideshow will be configured from [editor.thetvsign.com](http://editor.thetvsign.com)

### NOTES:

- Updates to your slideshows will be visible on your TV typically within 5 minutes
- The slideshow will AUTOMATICALLY check for updates every few minutes via WiFi. If your WiFi is not available the TV Sign Player will continue to play the current slideshow.
- If you change your WiFi Password you must repeat step 2 before your edits will be updated on your player again.

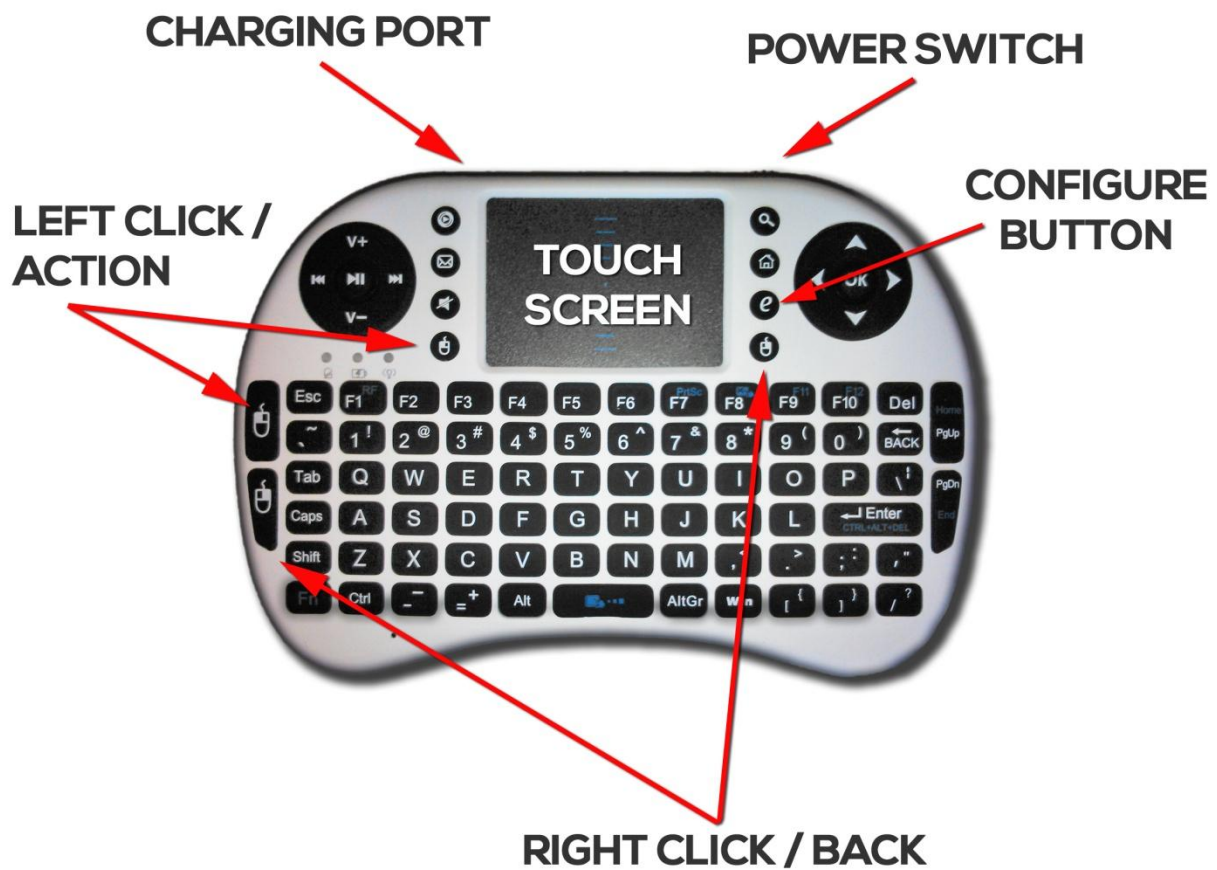

**FRUSTRATED???** Don't worry just give us a call at 1-877-722-9104